




INSTALLATION INSTRUCTIONS



Jaguar XF

JAG-XF-4-A

 Parts List



A x2

B x2



C x2



X x2



Y x2




Z x4




x1

INSTALLATION INSTRUCTIONS - JAG-XF-4-A

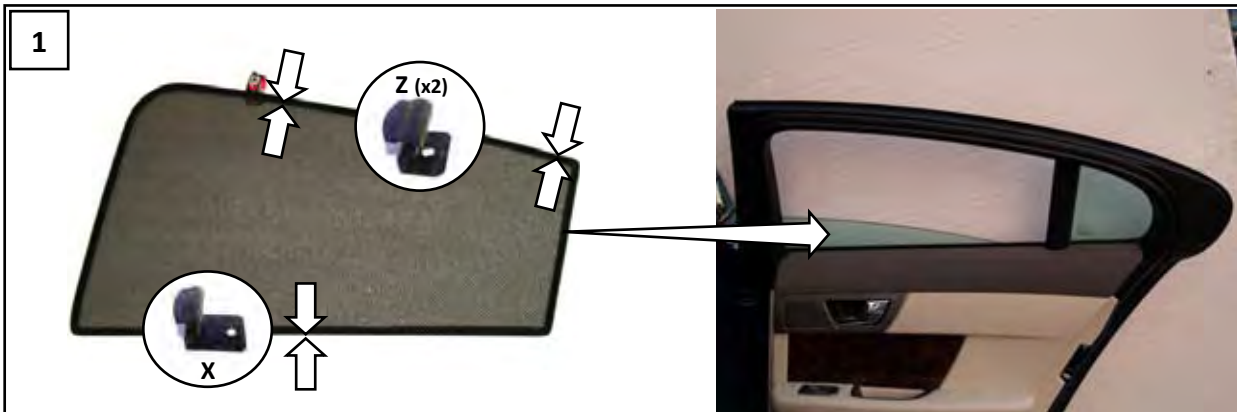

(Exterior View)

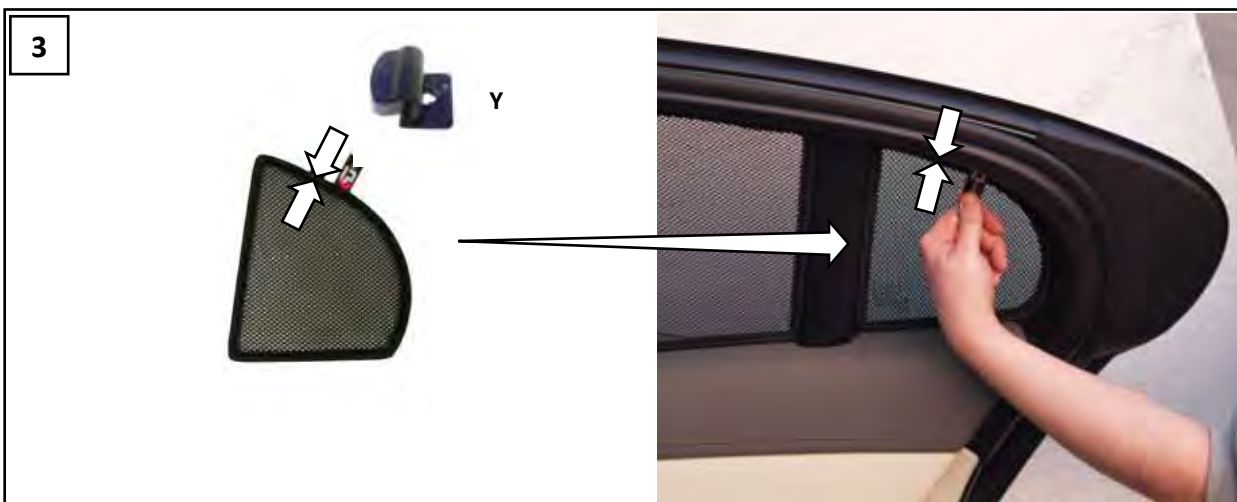

INSTALLATION INSTRUCTIONS - JAG-XF-4-A

