




 
# INSTALLATION INSTRUCTIONS





A Class 5dr

MB-ACLS-5-A

## Parts List

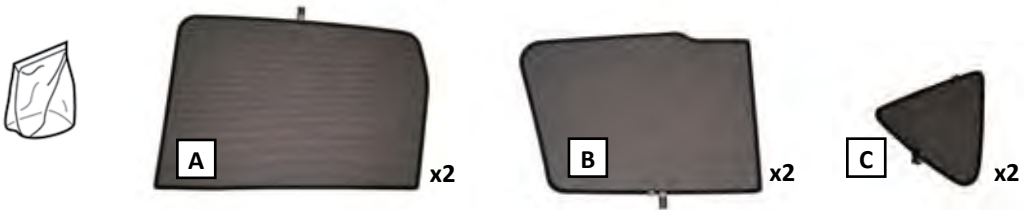

INSTALLATION INSTRUCTIONS - MB-ACLS-5-A

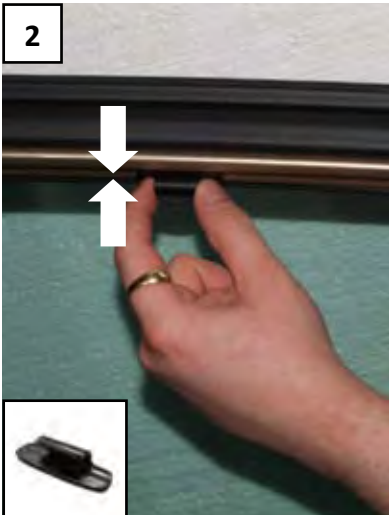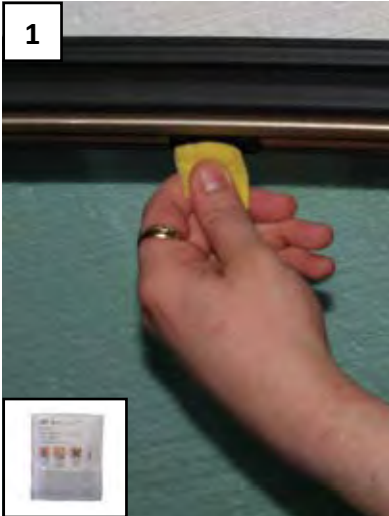

# INSTALLATION INSTRUCTIONS - MB-ACLS-5-A


1



2



3

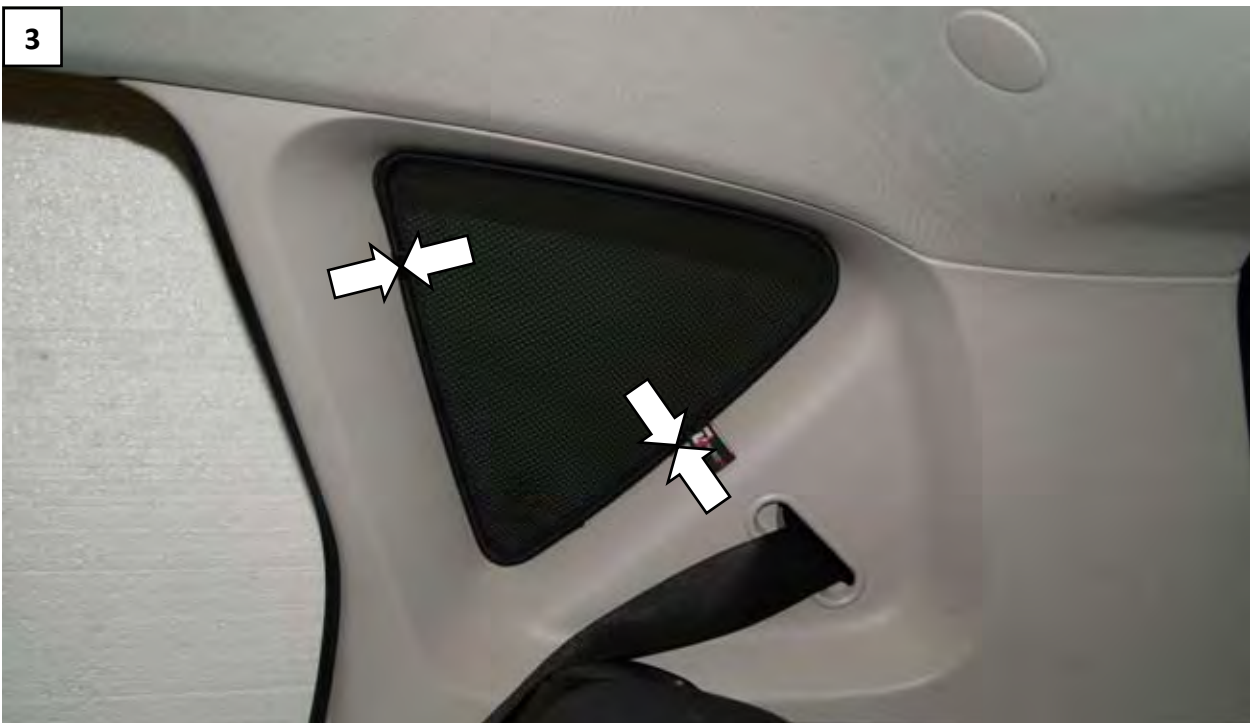

INSTALLATION INSTRUCTIONS - MB-ACLS-5-A

