


Parts List

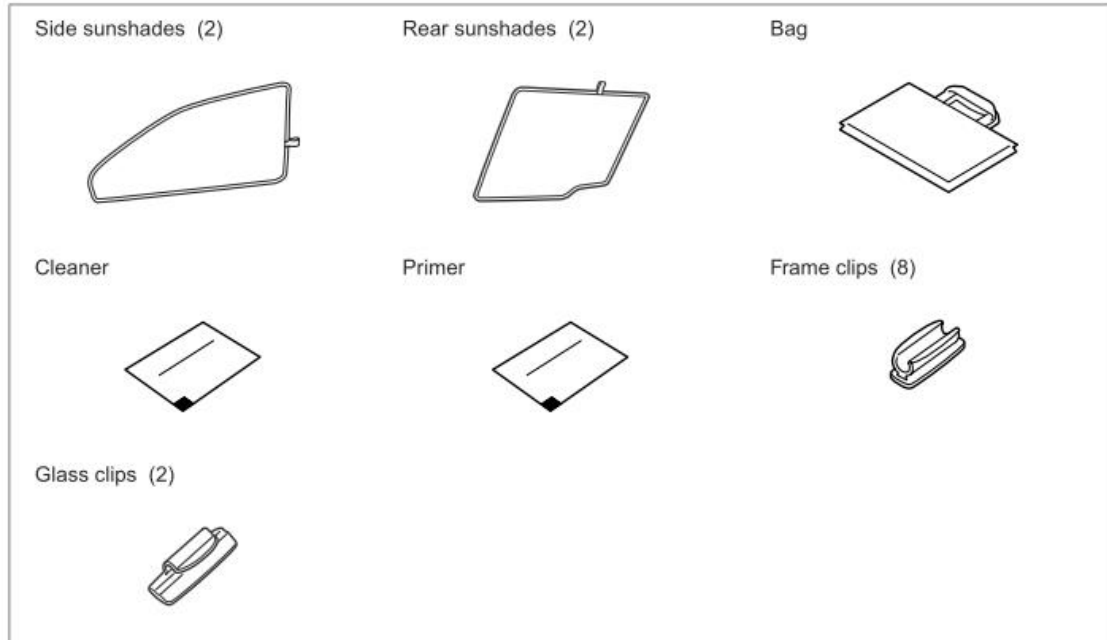

Tools and Supplies Required


- Scale
- Felt-tip pen
- Masking tape

Before You Begin

Customer Information

- In these instructions, the illustrations show the left side sunshade being installed. The same procedure applies to the right side sunshade.
- This kit should only be installed if the ambient air temperature is 15°C (60°F) or above. Heat the bonding surfaces with a hair dryer set on LOW when the ambient air temperature is below 15°C (60°F).
- Before attaching the sunshades, thoroughly clean the bonding surfaces with a cleaner.
- Be extremely careful not to damage the body.

Illustration of the Components on the Vehicle

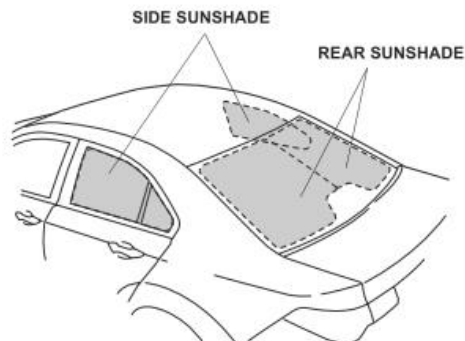


790601AT

Installation


Installing the Side Sunshade

1. Open the left rear door.
2. Check the positions where the frame clips are installed and clean the surfaces with the cleaner provided from the kit.

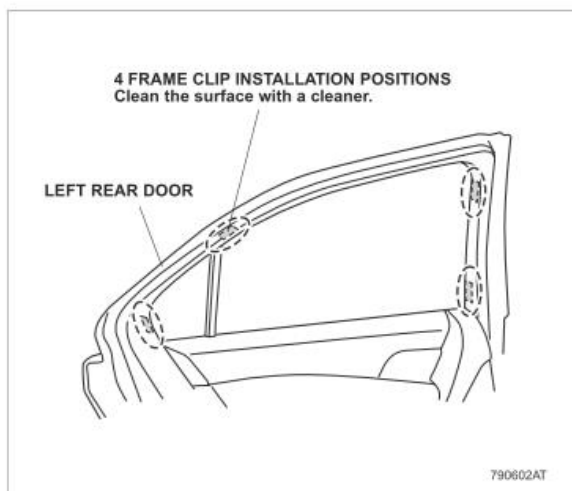


790602AT

3. Measure each clip installation position to the dimensions shown.
4. Mark with a felt-tip pen the position of the measured dimension of the door sash.

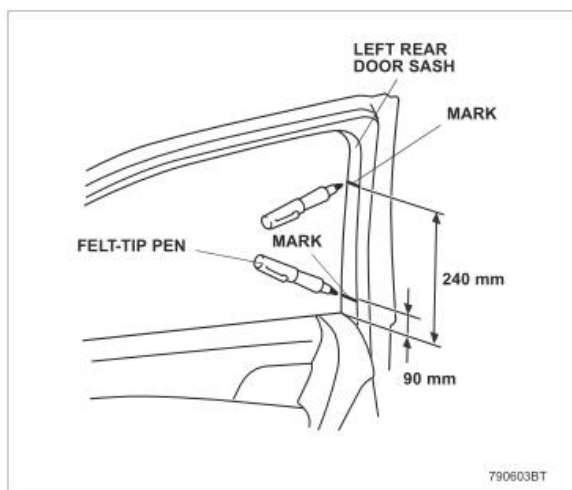


790603BT


5. Measure each clip installation position to the dimensions shown.
6. Mark with a felt-tip pen the position of the measured dimension of the door sash.

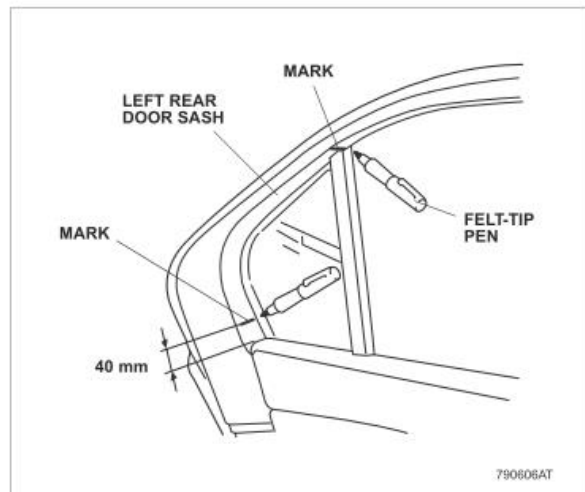


7. Temporarily position the two frame clips on the door sash aligning the end of the frame clips with the marks you made in step 4 and attach the pieces of masking tape as shown.

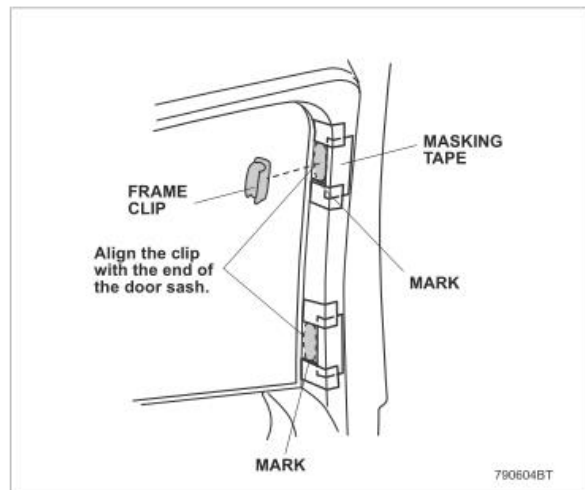


8. Temporarily position the frame clips on the door sash aligning the end of the frame clips with the marks you made in step 6 and attach the pieces of masking tape as shown.

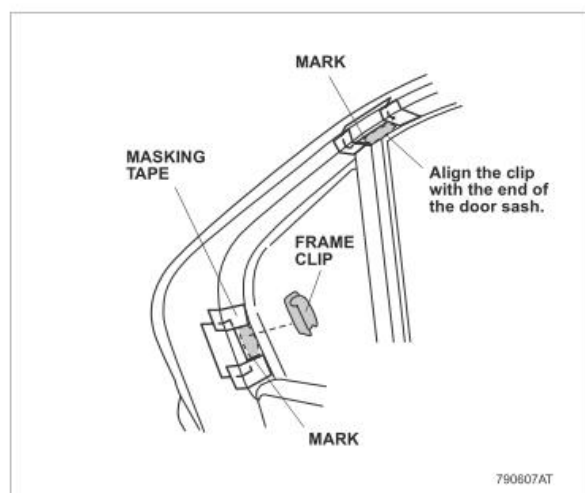


9. Apply primer to the parts of the door sash enclosed with the masking tapes and let it dry thoroughly.

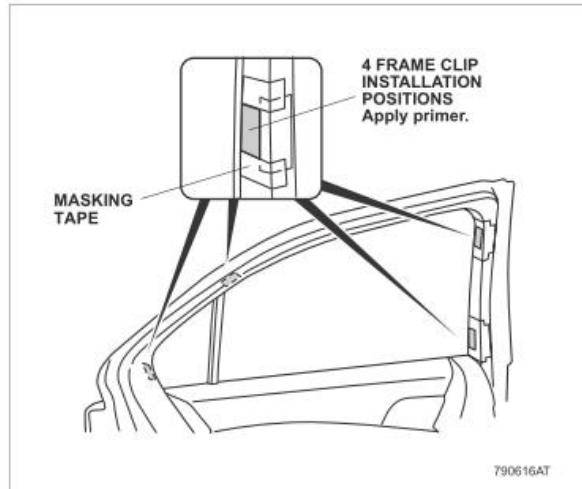


10. Remove the adhesive backing from each of the two frame clips and install the frame clips in the positions shown.
 - Note the installation direction of the clips.

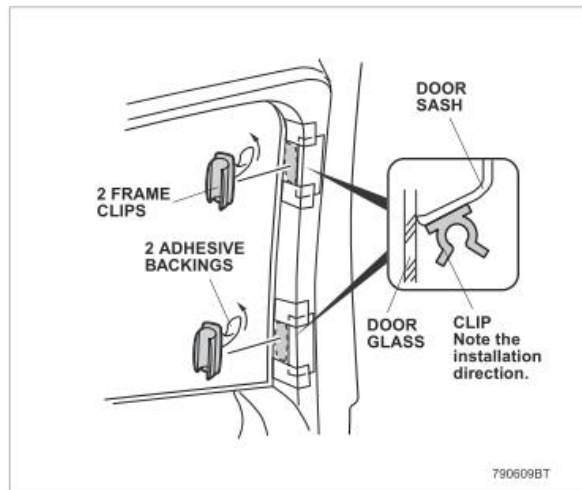

11. Remove the adhesive backing from each of the two frame clips and install the frame clips in the positions shown.
 - Note the installation direction of the clips.
12. Remove the masking tapes.

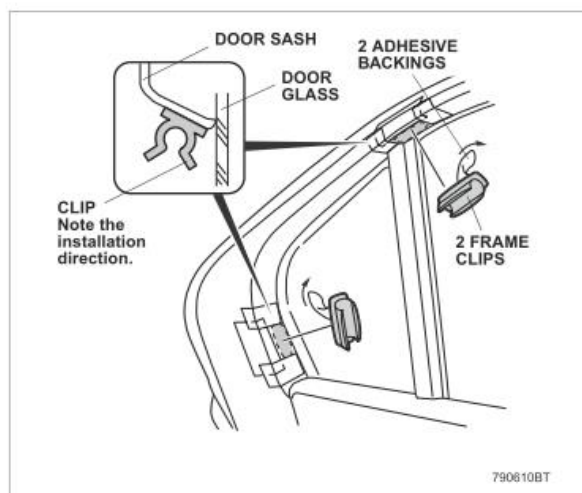


13. Install the side sunshade on the frame clips in the numbered sequence of **1** through **4**.
14. Repeat the same work on the other side.

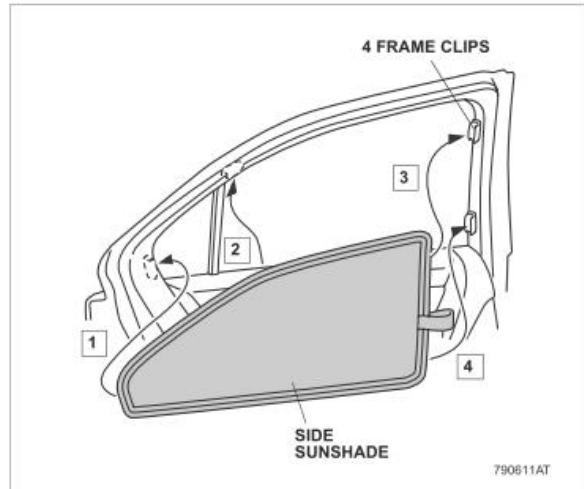


Installing the Rear Sunshade


15. Check the positions where the glass clips are installed and clean the surfaces with the cleaner provided from the kit.

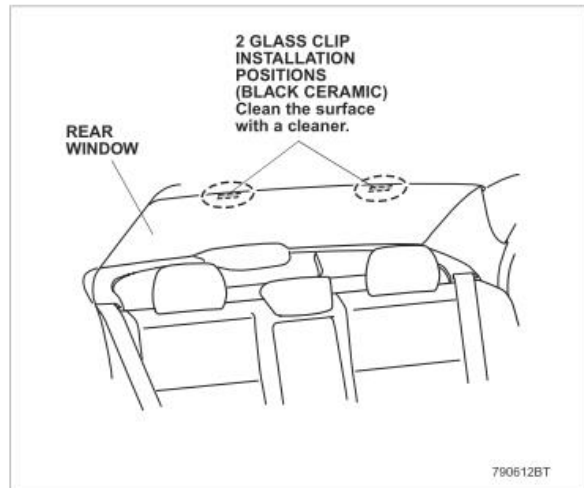

16. Measure each glass clip installation position to the dimensions shown.
17. Mark with a felt-tip pen the position of the measured dimension of the rear window.

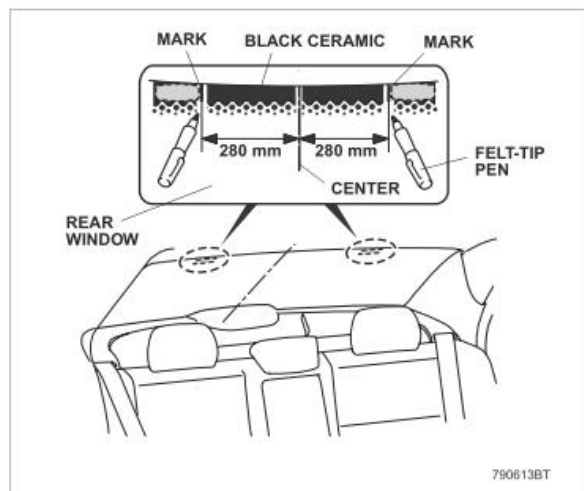

18. Remove the adhesive backing from each glass clip.
19. Align the edge of the glass clip with the mark on the rear window, and attach the glass clip on the window.
 - Hold the adhesive tape of the glass clip back side firmly against the rear window for 15 seconds after attaching the glass clip.
20. Erase the marks.

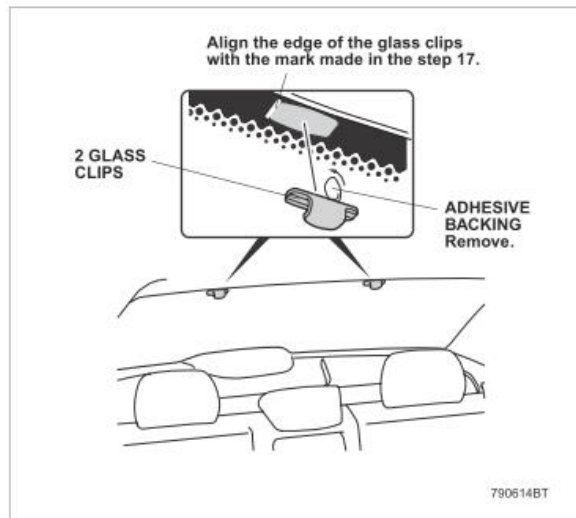

21. Install the rear sunshade on the glass clip **1**.
22. Secure the rear sunshade by setting it between the high mount brake light and rear window.
23. Install another rear sunshade.

