


**SUNSHADE
PARE-SOLEIL
SONNENSCHUTZBLENDE
ZONNESCHERM
TENDINA PARASOLE
PROTECTOR SOLAR
QUEBRA-LUZ
SOLSKYDD**

**OWNER'S MANUAL
MANUEL DE L'UTILISATEUR
BEDIENUNGSANLEITUNG
GEBRUIKERSHANDLEIDING
MANUALE DEL PROPRIETARIO
MANUAL DEL USUARIO
MANUAL DO UTILIZADOR
ÄGARHANDBOK**

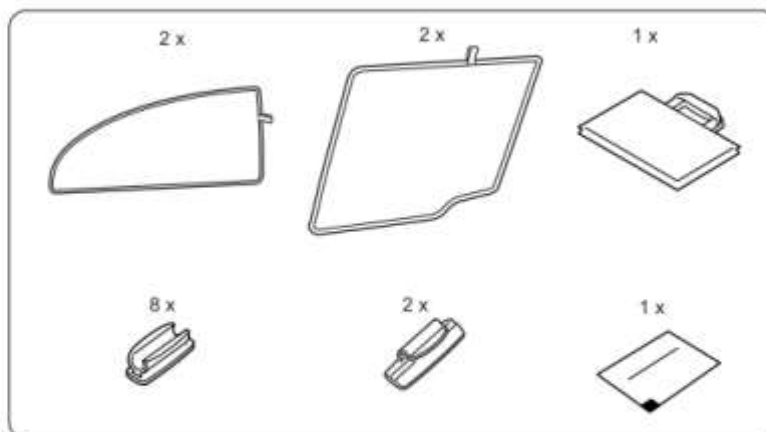


ENGLISH

Thank you for purchasing a Honda Access product.

Please read this Owner's Manual before using the Honda Access product and keep it in the glove box for future reference.

- This product is designed to be used exclusively with Honda cars. Honda Access is not responsible for the product installed in other than applicable Honda cars.
For information on the applicable models, please contact your Honda car dealer.
- The Owner's Manual should be considered a permanent part of your car. It should remain with the car at all times and stay with the car if it is sold.

SPECIAL MESSAGES

- Honda Access provides many important safety messages in this manual. For your safety and safety of others, pay special attention to all warnings preceded by this alert symbol .
Failure to follow the warnings contained in this manual can result in serious injury or accident.



DANGER

- Indicates that severe personal injury or death will result if instructions are not followed.



WARNING

- Indicates a strong possibility that serious injury or death may result if instructions are not followed.



CAUTION

- Indicates a possibility that minor personal injury may result if instructions are not followed.

SYMBOLS

- If instructions are preceded by the following symbols, they will give helpful advice or information.



ADVICE

- Gives advice to prevent damage to the product.
- Gives advice to handle emergency situation.




INFORMATION

Gives helpful information or instructions to be followed in using the product.



CAUTION

- Do not move the rear door window glass during driving.

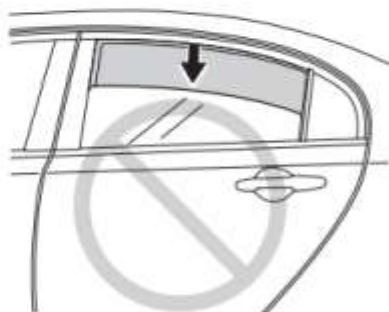

852710108

- The sunshade can come off unless it is installed on the clip securely.
- Sunshade must not be used during the hours of darkness.
- To allow the adhesive to "cure", do not install the sunshade for 24 hours; if not the clips will not reach their maximum adhesive strength and could be lost.

TOOLS AND SUPPLIES REQUIRED

- Scale
- Felt-tip pen

INSTALLATION

Before You Begin:

- In these instructions, the illustrations show the left side sunshade being installed. The same procedure applies to the right side sunshade.
- This kit should only be installed if the ambient air temperature is 15°C (60°F) or above. Heat the bonding surfaces with a hair dryer set on LOW when the ambient air temperature is below 15°C (60°F).
- Before attaching the sunshades, thoroughly clean the bonding surfaces with a cleaner.
- Be extremely careful not to damage the body paint finish.


■ REAR DOOR

Installing the Clip

1. Open the left rear door.
2. Check the positions where the clip are installed and clean the surfaces with the cleaner provided from the kit.

CLIP INSTALLATION POSITIONS (4)


• Clean the surface with a cleaner.

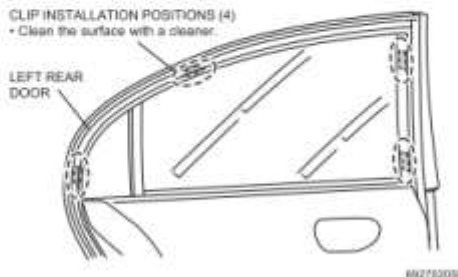



69270005

3. Measure each clip installation position to the dimensions shown.
4. Mark with a felt-tip pen the position of the measured dimension of the door sash.


Make marks as marks with felt-tip pen as shown.

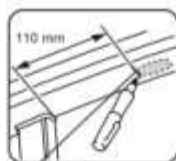

Make marks as marks with felt-tip pen as shown.

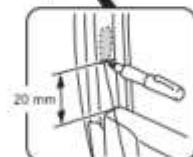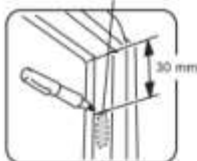


Make marks as marks with felt-tip pen as shown.

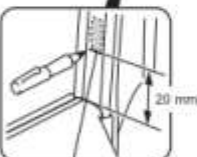

Make marks as marks with felt-tip pen as shown.

69270005

5. Remove the adhesive backing from each clip.
6. Align the edge of the clip with the mark on the door sash, and attach the clip on the sash.
 - Hold the adhesive tape of the clip back side firmly against the door sash for 15 seconds after attaching the clip.

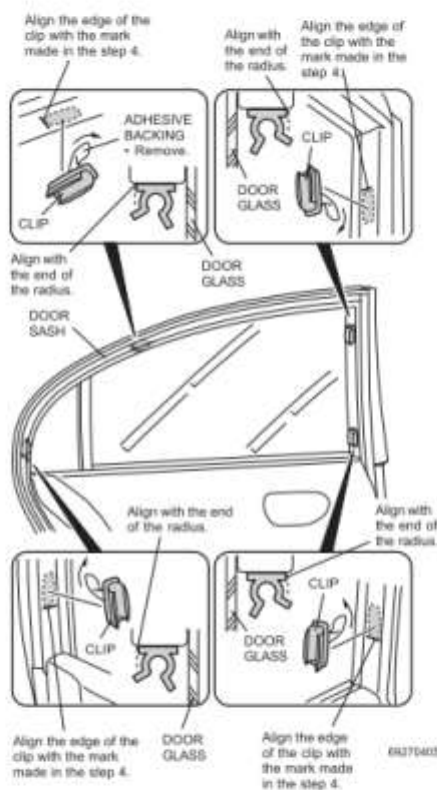


69270405

7. Repeat the procedure to install the clip on the right side.


Installing the Side Sunshade

1. Install the sunshade on the clips in the numbered sequence of **1** through **4**.

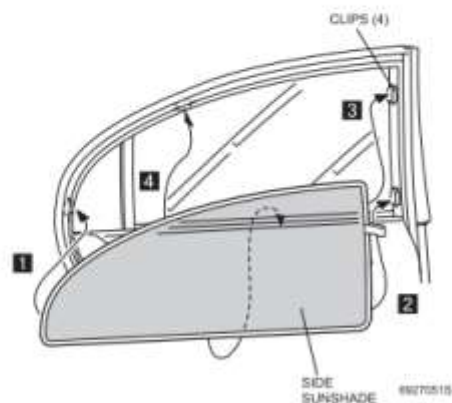

Removing the Side Sunshade

1. Holding the strap, release the sunshade from the clips in the numbered sequence of **1** through **4**.

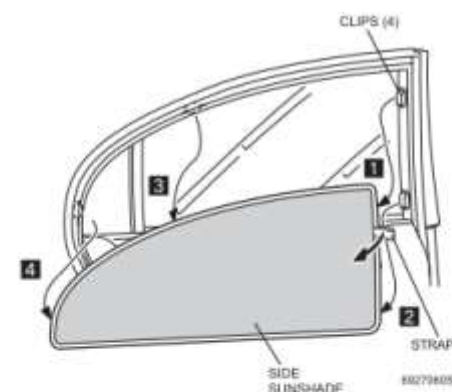


REAR WINDOW

Installing the Glass Clip

1. Check the positions where the clip are installed and clean the surfaces with the cleaner provided from the kit.




2. Measure each glass clip installation position to the dimensions shown.
3. Mark with a felt-tip pen the position of the measured dimension of the rear window.

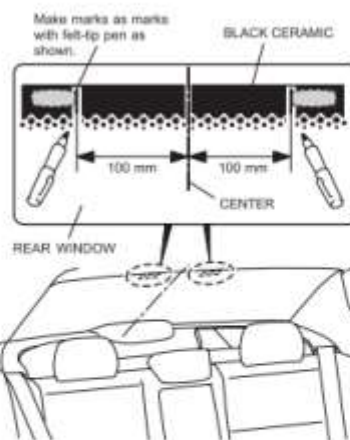


4. Remove the adhesive backing from each glass clip.
5. Align the edge of the glass clip with the mark on the rear window, and attach the glass clip on the window.
 - Hold the adhesive tape of the glass clip back side firmly against the rear window for 15 seconds after attaching the glass clip.

Align the edge of the glass clip with the mark made in the step 3.

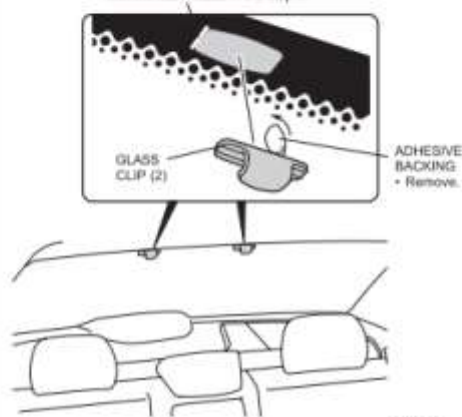

Installing the Rear Sunshade


1. Install the sunshade on the glass clip **1**.
2. Secure the sunshade by setting it between the high mount brake light and rear window **2**.

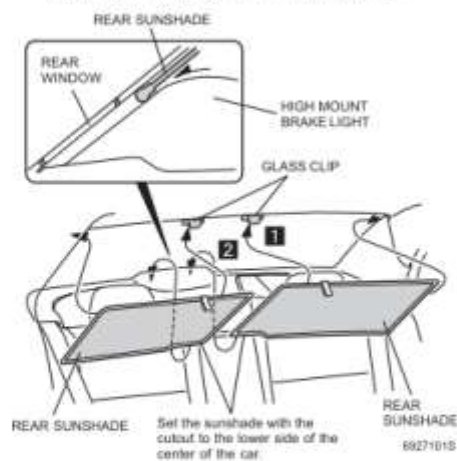

3. Install another rear sunshade.

Removing the Rear Sunshade

1. Holding the strap **1**, release the sunshade from the glass clip.
2. Release the sunshade from the high mount brake light **2**.

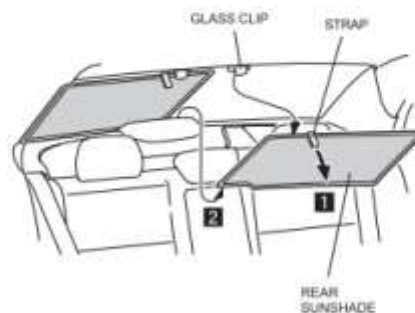

692711035

3. Remove another tailgate sunshade.



ADVICE

After removing the sunshades, store them in a bag.