
## SIDE WINDOW INSTALLATION 2. 1. D 3. 5. 4



## TAILGATE WINDOW INSTALLATION

## WARNING

- It is important that you clean the surface using the wipes provided before installing the clips Once the clips have been fitted, leave them to stand for 30 mins before installing the sunshades. 1.
- 2.
- 3. Clips must not be removed once fitted.

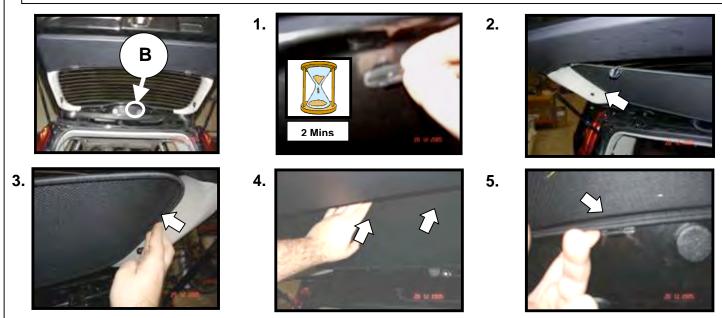








Contents:

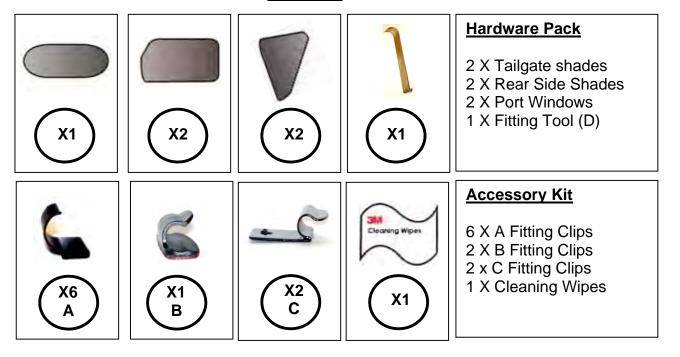

🕂 WARNING

Please read these fitting instructions BEFORE installing the sunshades. Take care not to scratch any paint work when fitting the clips