

Installation Manual

PEUGEOT 208 5DR
PEU-208-5-A-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M05 x 4



CL-T01 x 1



Side Shade Installation

PEUGEOT 208 5DR
PEU-208-5-A-18

COMPONENTS NEEDED:



CL-M05 x 4



CL-T01 x 1

STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP



STEP #2

POSITION THE SIDE SHADE




STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



STEP #4

ENSURE SECURELY FITTED IN PLACE

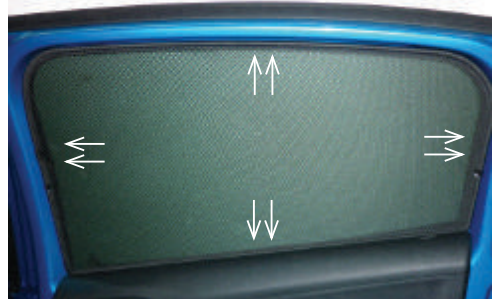

CAR
SHADES