

Installation Manual

SKODA RAPID 5DR
SKO-SPAC-5-A-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M09 x 4




CL-T01 x 1



Side Shade Installation

SKODA RAPID 5DR
SKO-SPAC-5-A-18

COMPONENTS NEEDED:

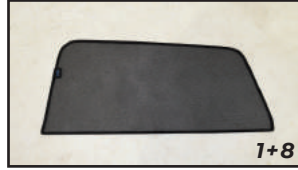

STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP USING TOOL



STEP #2

POSITION THE SIDE SHADE




STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



STEP #4

ENSURE SECURELY FITTED IN PLACE

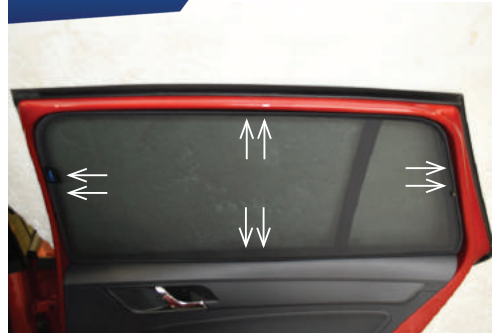

CAR
SHADES