

Installation Manual

TOYOTA CH-R 5DR
TOY-CHR-5-A-18



COMPONENTS INCLUDED



FIXING CLIPS



CL-M04 x 2



CL-M12 x 2



CL-M13 x 2



Side Shade Installation


TOYOTA CH-R 5DR
TOY-CHR-5-A-18

COMPONENTS NEEDED:



STEP #1

ATTACH CLIPS ON SHADE EDGES

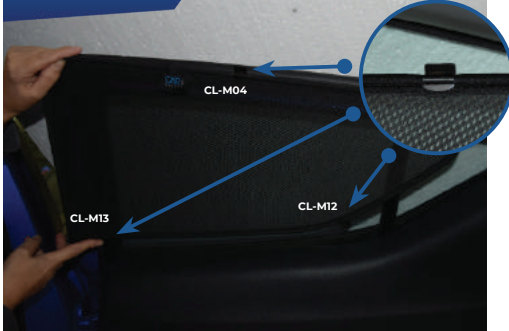


STEP #2

POSITION THE SIDE SHADE



STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP

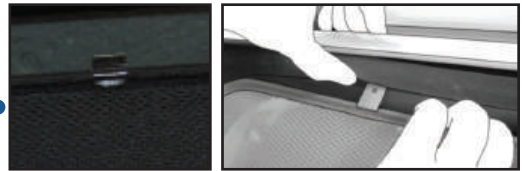

STEP #4

ENSURE SECURELY FITTED IN PLACE

