

# Installation Manual

VW GOLF SPORTSVAN 5 DR  
VW-GOSV-5-G-18



## SHADES



## FIXING CLIPS



CL-M05 x 4



CL-T01 x 1



# Side Shade Installation

VW GOLF SPORTSVAN 5 DR  
VW-GOSV-5-G-18

COMPONENTS NEEDED:



## STEP #1

INSERT CLIPS INSIDE WEATHERSTRIP



## STEP #2

POSITION THE SIDE SHADE




## STEP #3

ATTACH SIDE SHADE BEHIND CLIPS



## STEP #4

ENSURE SECURELY FITTED IN PLACE

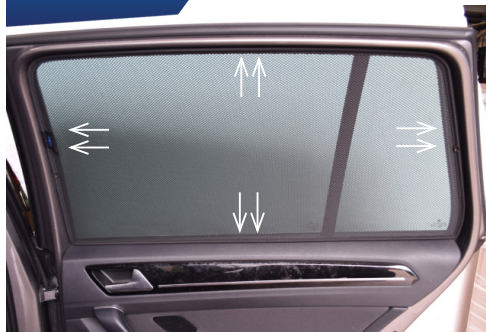

**CAR**  
SHADES