



Installation Manual

MG ZS 5DR
MG-ZS-5-A-18

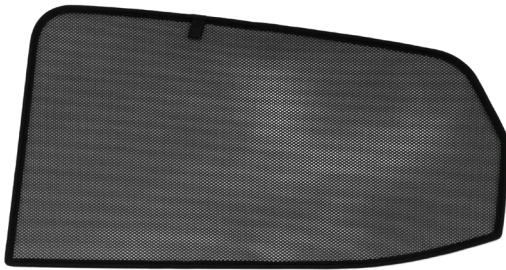

Shades

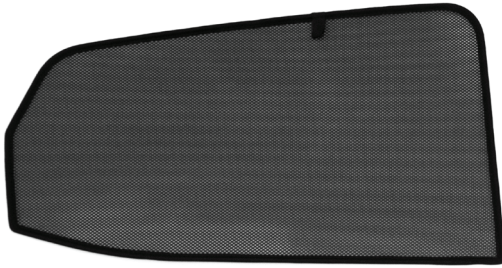

Side Shades

Fixing Clips



CL-M12 x 2




CL-M13 x 4



Installation

MG ZS 5DR
MG-ZS-5-A-18

Components Needed



Side Shades




CL-M12 x 2



CL-M13 x 4

Side Shade Installation

STEP 1

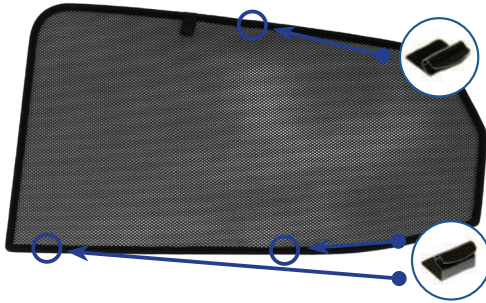

Position clips onto the shade as shown ensuring the C-shape portion of the clip fits onto the frame securely. Ensure the woven label of the shade is facing you.

STEP 2



Place the bottom horizontal edge of the shade into position with the extension of the clips fitting between the plastic trim and rubber window seal.

STEP 3



Ensure both clips along the bottom horizontal edge of the frame are positioned between the plastic trim and the rubber seal of the window.

STEP 4



Gently flex the top horizontal edge of the shade so the clip can move into position. Warning. Take care not to scratch the clip along the painted door frame. Position the extension of the clip between the metal frame and the rubber window seal.

Installation

MG ZS 5DR
MG-ZS-5-A-18




Side Shade Installation

STEP 5



Using the woven label pull the shade upwards to ensure the clip is fully inserted into position.

STEP 6

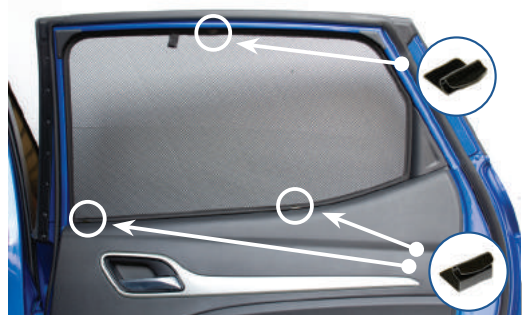

The shade is now installed. Repeat on the opposite side window.