

Installation Manual

MERCEDES VITO E.L.W.B
MB-VITOXLWB-5-C-18



COMPONENTS INCLUDED



FIXING CLIPS




CL-M02 x 8



Side Shade Installation


MERCEDES VITO E.L.W.B
MB-VITOXLWB-5-C-18

COMPONENTS NEEDED:

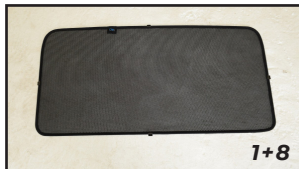

STEP #1

ATTACH CLIPS ON SHADE EDGES

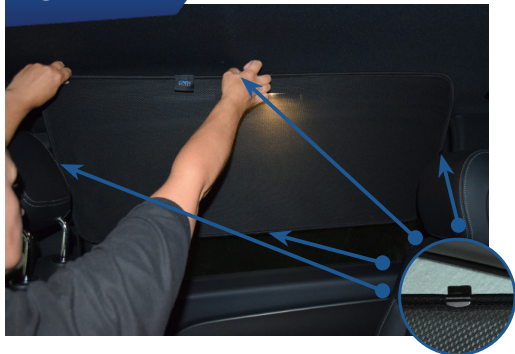

STEP #2

POSITION THE SIDE SHADE



STEP #3

INSERT CLIPS INSIDE WEATHERSTRIP



STEP #4

ENSURE SECURELY FITTED IN PLACE



CAR[®]
SHADES